

You asked, we answered: Basket Measuring 101!

Q: Just exactly how do the folks at burton + BURTON™ arrive at basket measurements?

A: Below is a brief tutorial on our method.

Legend:


H = height, flat surface to lip

W = width, left to right

D = depth, front to back

Opening = top of round baskets

T = tall, flat surface to top

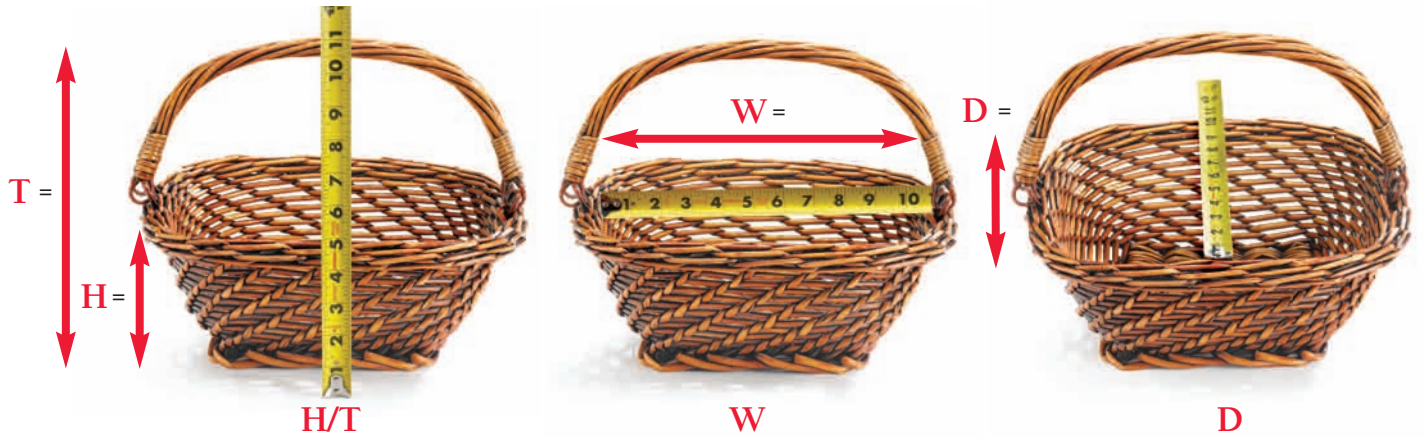

Hinged, overhead handles face the front forming an arch. Width + depth are inner to inner, so you know the size of the foam to be cut or approximately how much space needs filling.



Be mindful that each basket is hand-woven so variations in size + consistency are to be expected.

Measurements are approximate + are subject to fluctuation from shipment to shipment.

Top row: 9710749

Middle row: 9710533

Bottom row: 9710470

Stationary, overhead handle faces the front. This basket is round so the measurement stated is “opening.” This is also inner to inner.



In the instance of stationary side handles, note that the handles are on the left + right as opposed to making an arch facing the front as in overhead handles.