

OMBRE ORBZ™ WAND

by Edward Muñoz, CBA®


Supplies

 20 Minutes




Qty
1

Orbz™ Balloon
Product #49508-18

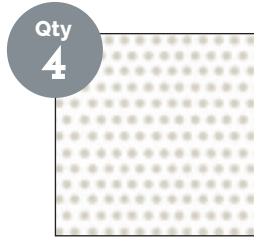


Qty
4

Cello Sheets-White Dots
Product #280225

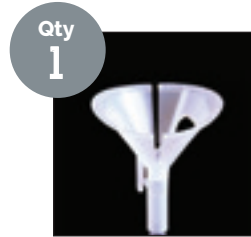

Qty
1

MaxiCup™ II Balloon Cup
Product #CC107

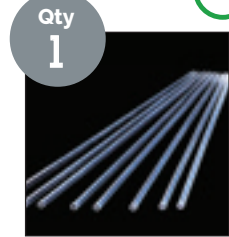

Qty
1

MaxiStick™ II Balloon Stick
Product #HPS20C



Qty
1

Mini Cool Aire®
 Dual Pro™ Inflator
Product #831



Qty
1

SUREBONDER® Glue Skillet
Product #803



Qty
1
pack

OASIS® Glue Pillows
Product #01560




Qty
1

Double Face Satin
 Ribbon-Light Pink
Product #DF0902



Qty
1

Double Face Satin
 Ribbon-Light Orchid
Product #DF0908

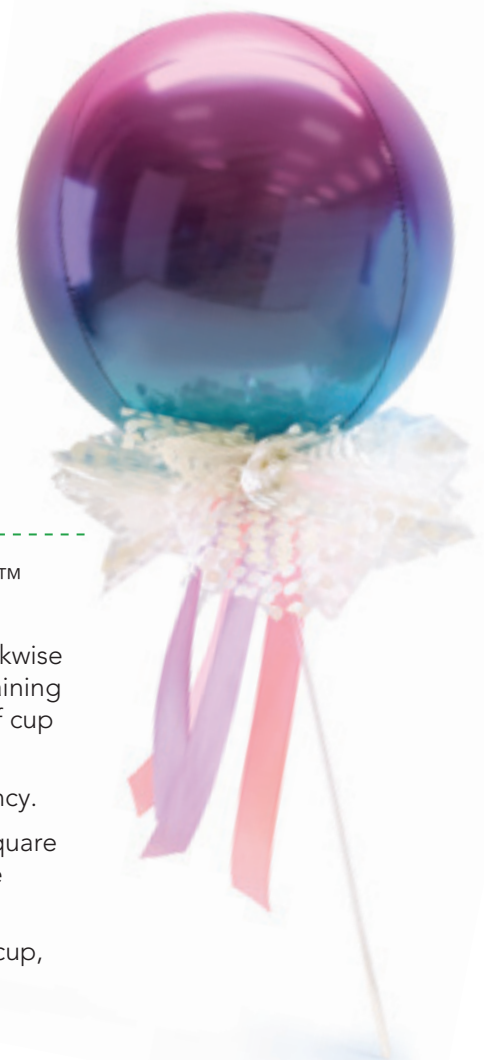

Directions

1. Using the largest tip, air-fill the Orbz™ balloon using the Mini Cool Aire® Dual Pro™ Inflator on high speed.
2. Slip the tail of the balloon through the large hole in the balloon cup and wrap clockwise to the first hook, for short tails, or the second hook, for longer tails. Insert the remaining end of the tail into the vertical slit. Insert the balloon stick into the bottom notch of cup (a dot of glue can go on the stick before insertion for added security).
3. Prep glue pillows in the glue skillet, on low, until glue is melted to a thick consistency.
4. Cut the cello sheets down to 15- 8"x10" sheets. For each cello sheet, gather the square in the center and dip into the glue pan. Glue the cello pieces on the outside of the balloon cup until the exterior space of the cup is covered.
5. Cut a 24" length of each ribbon. Place both pieces together against underside of cup, around the stick and cup, and tie a knot, creating 4 ribbon tails.

www.burtonandburton.com

