TIOCITO Photo Balloon

STATION CONTRACTOR CON

Choose photo

Add message

Print

Inflate


Cove from Bour River **Celebrate** special occasions with Personalized **Photo Balloons**

> **Birthday • Graduation Retirement • Wedding Anniversary • Holiday Just Because**





33.87 32.74 31.61 30.48

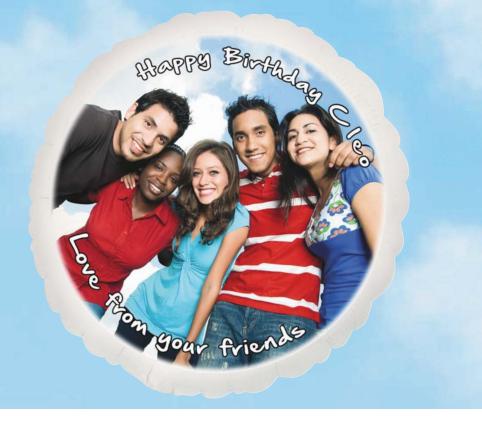

Floato™ is a foil balloon that has been coated on one side with an inkjet receptive material so the balloon can be printed onto directly with an inkjet printer. The balloon is assembled into a patented structure that guides the balloon through the printer. 5 assembled **Floato™** balloons are vacuum-packed in a poly bag for protection while in transit.

Anagram recommends the use of the Canon Pixma Pro-100 with Floato™. In fact, Anagram assumes no responsibility for results when any printer model other than this recommended printer is used.

IMPORTANT! Floato™ CANNOT be printed with a laserjet printer. The heat produced by a laserjet printer will damage the **Floato™** balloon!

47731-18 is intended to be printed with the **Canon Pixma Pro-100** inkjet printer and is supplied in a trade package, packed 5 to a vacuum-bag.

To print Floato™ 47331-18 with the Canon Pixma Pro-100 inkjet printer and the free Floato™ App:



- 1) Download the App free-of-charge at: www.burtonandburton.com/21-FLOATO-CANON-PIX-DZ104937.asp
 - Apple and Windows version both available
 - Install on computer as directed
 - Printing is done from the computer-not from the website
- 2) When ready to print **Floato™**, cut open the plastic bag:
 - Be careful not to cut into the product itself
 - Remove only the balloon(s) you plan to print
 - o Leaving balloons in the bag until ready for printing will keep them protected from dirt and stains



3) To Print **Floato™**:


 Place balloon into printer with arrows pointing downwards towards the printer and blank printable surface facing youso that the blank BALLOON side is printed when in the printer



• WARNING:

- o Before printing the first balloon of the day print the reverse paper side of a **Floato™** first with the arrows pointing downward (you won't hurt the balloon) or use throw-away paper instead
- o This is important—the inkjet heads may be clogged when not used for several hours (same with a new printer) and this will clear the heads
- o You can then insert and print a balloon in the normal way

4) Click on the App

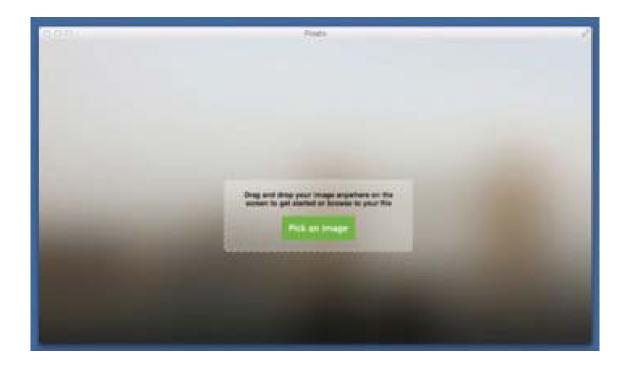

• Drag your photo (.jpg) or open into the display window



• Adjust the size of the image with the bar at the top right and placement by dragging within the circle



• Type your message in the *Top text* and *Bottom text* boxes o Choose from five different fonts



 Choose the color of the text and its outline by clicking on the color picker-top and bottom text can be different fonts and colors
 The colors can be replicated in either box by using the arrows




- Click *Print*-the big green bar at bottom right
- When the Print Window appears, select correct printer and check settings (save these specific settings for repeat use):
 - o Paper Size is A3+ 13" x 19" (329mm x 483mm)
 - o Paper Type is **Matte (or Other) Photo Paper**
 - o Print Quality is **Standard** (High can also be used)




- 5) Connect the printer and apply these basic settings as shown on pages 8-10:
 - IMPORTANT! Repeat this procedure each time the printer is turned on for printing Floato™


MAC PRINTER SETTINGS:

• In *Printers & Scanners* select *Options & Supplies* then select *Utility*

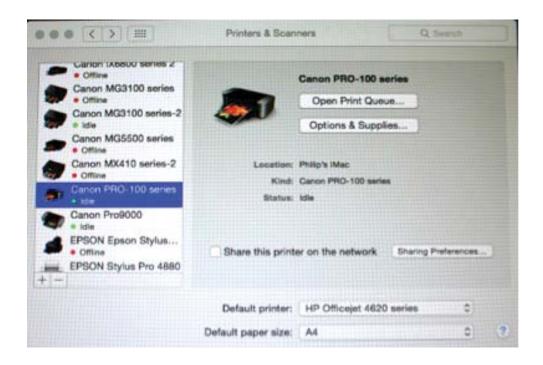

Next open Printer Utility and select Custom Settings

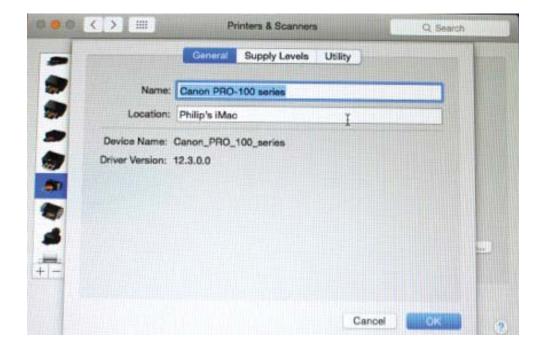

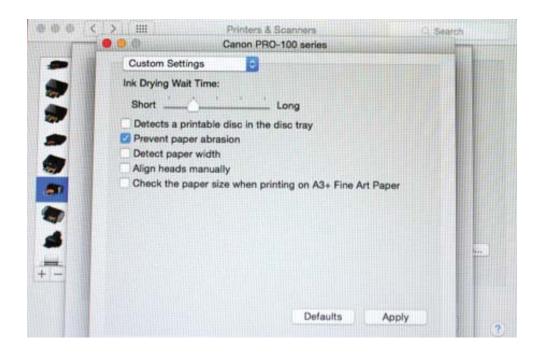


• Tick *Prevent paper abrasion* only and reduce *Ink Drying Wait Time* one notch toward *Short*

Custom Settings	٥		
ink Drying Wait Time	90		
Short		Long	
Detects a printable	le disc in the d	lisc tray	
Prevent paper abo	rasion		
Detect paper widt	th		
Align heads manu	ually		
	CONCOLL DE UNITED DE LA CONTRACTOR DE LA	A SA CONTRACTOR OF THE PARTY OF	
Check the paper :	size when prin	ting on A3+ Fine A	rt Paper
Check the paper	size when prin	ting on A3+ Fine A	rt Paper
Check the paper	size when prin	ting on A3+ Fine A	rt Paper
Check the paper	size when prin	ting on A3+ Fine A	rt Paper
Check the paper	size when prin	ting on A3+ Fine A	rt Paper
Check the paper	size when prin	ting on A3+ Fine A	rt Paper
Check the paper	size when prin	ting on A3+ Fine A	rt Paper
Check the paper	size when prin	ting on A3+ Fine A	rt Paper
Check the paper	size when prin	ting on A3+ Fine A	rt Paper
Check the paper	size when prin	ting on A3+ Fine A	Apply

• Click Apply


PC PRINTER SETTINGS:

- Go to Printer Preferences
- Locate the Maintenence Tab
- Locate and click the Custom Settings button
- On the next menu, tick the *Prevent paper abrasion* check box

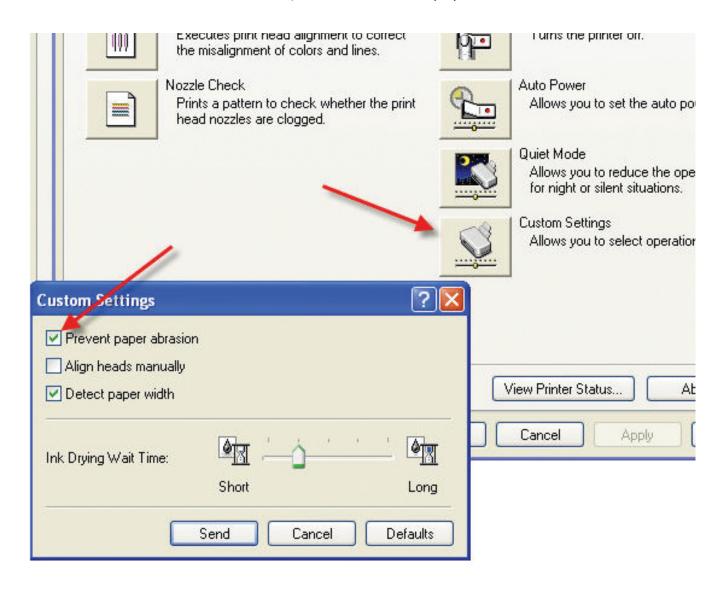

- And reduce Ink Drying Wait Time one notch toward Short
- Click Send

- 6) Remove the balloon from the printer tray after the printing is complete
- 7) Remove the balloon from the paper carrier assembly
 - Slowly and gently peel the top sheet from the folded balloon

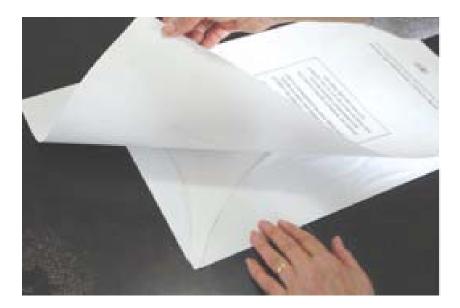

• Slowly unfold the balloon flaps from the carrier paper and slowly peel the paper from the balloon




8) **Floato**TM is ready for helium and a ribbon!

For quick responses to any technical or procedural questions please contact us at:

info@burtonandburton.com or 800-241-2094

foato Photo Balloons

Floato™ balloons are easy-to-personalize, retail-friendly photo balloons that can be printed in minutes. Sold in a pk/5, these hot new balloons include everything you need to download the free App and print the balloons from your own Canon Pixma Pro-100 inkjet printer.

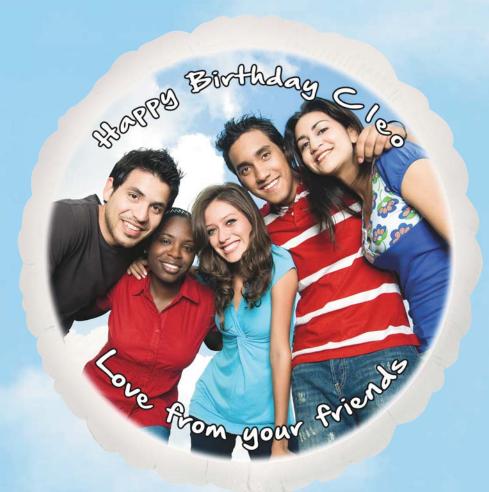

Choose photo

Add message

Print

Inflate

Celebrate special occasions with Personalized floato Balloons!

Birthday • Graduation • Retirement • Wedding
Anniversary • Holiday • Just Because



www.burtonandburton.com

800-241-2094 Fax 800-880-9759 706-548-1588 Fax 706-546-8482 325 Cleveland Road Bogart, GA 30622







